

The new adjustable arm!

-130 mm or 230 mm

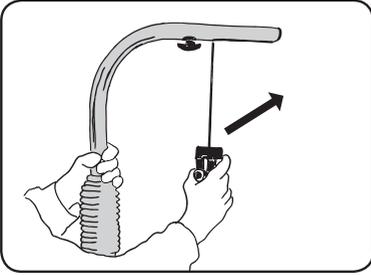


Fig. 1

Pull down the line and place it in front of the arm. That will take away the power from the line

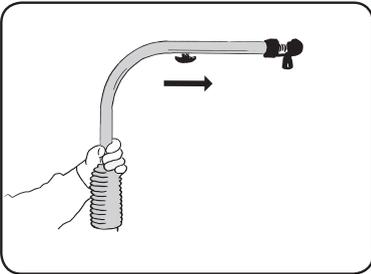


Fig. 2

Open the lock screw and place it in correct position

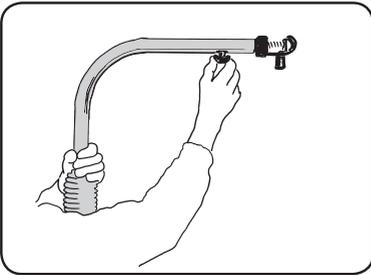


Fig. 3

Lock the screw

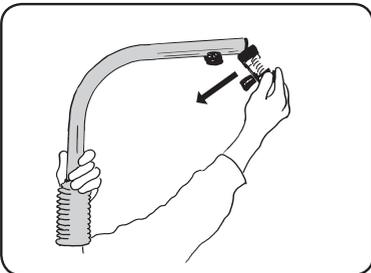


Fig. 4

Take down the camera hook in its new position and you are ready to start shooting.