

EASYRIG STABIL G3

1




Set up:

1. Assemble the STABIL G3 top bar into the Vario power pack by sliding the guide post into the line hole of the Vario power pack or standard Cinema power bar.
2. While holding the base of the STABIL G3 grab the folded front bar and lift upwards until the bar slides in completely flush. Keep hands clear of the connection joint to avoid injury.

Compacting:

Fold the top arm against the STABIL G3 base by pulling the front bar completely forward and then down. Pull the whole arm and fold into the vest.

2

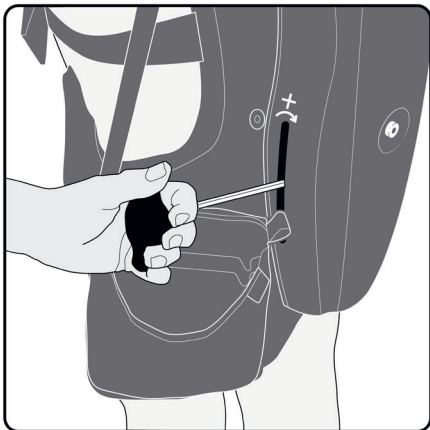


Adjusting the tension on the Vario 5

If you have a Vario 5, adjust the power pack to match your camera setup. While adjusting the tension of the power pack make sure to lock the arm or hold it at the lowest position to avoid interference from the STABIL G3.

For further details please read the Vario 5 user manual.

3

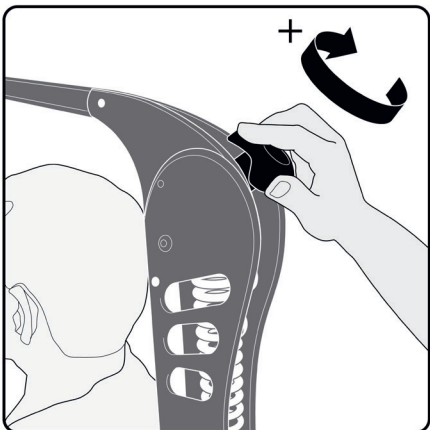


Adjusting the tension on the STABIL G3

Increase the tension of the spring by turning the knob clockwise. The Easyrig STABIL G3 can stabilize camera setup weights between 5-25 kg (11-55 lbs) but is limited to the maximum weight capacity of the power pack it is combined with.

The Easyrig STABIL G3 is adjusted correctly if the arm is resting between the lowest and highest position when a camera or gimbal is attached.

For setup video go to www.easyrig.se -> Support -> Service Videos & Manuals

4

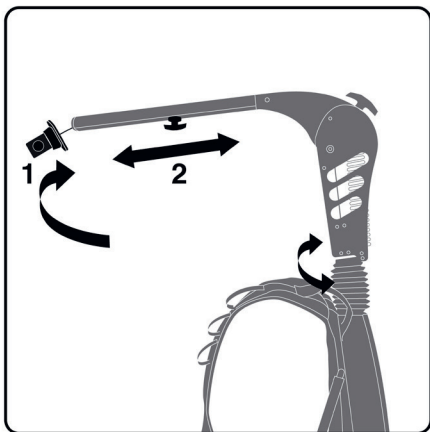


Adjusting the slider

Place the camera hook in front of the upper arm (1). Adjust the slider (2) to preferred location and lock it tight. When the slider is in position, gently put back the camera hook.

The Easyrig STABIL G3 has ball bearings in the back of the arm, enabling smooth lateral movement from left to right within 80 degrees without friction. This smooth lateral movement together with the spring (up and down) will make your shots steadier.

5

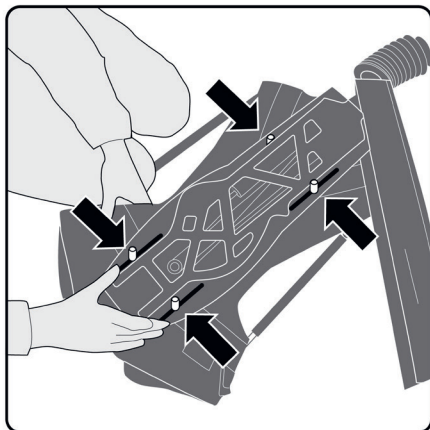


Adjust according to your height

Open the Vario 5 cover using the tension adjustment tool mounted on the power pack. Use the same tool to loosen the hex column nuts in each corner of the back plate.

DO NOT REMOVE THE NUTS FULLY. Slide the power pack up/down to desired position. Tighten the 4 nuts and replace the cover.

6

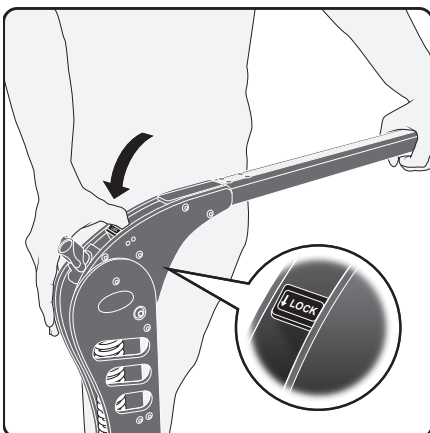

Locking the arm in 90 degrees

1. Place one hand on the end of the STABIL G3 arm and place one finger on the locking lever.
2. Press the arm downwards while applying slight pressure to the locking lever. Press the locking lever towards the adjustment knob.
3. At 90 degrees the lever will lock into position and make a click sound.

Taking a look at when the stickers align on the side plates it will make it easier for you to lock the STABIL G3.

