



Easyrig **Vario 6**

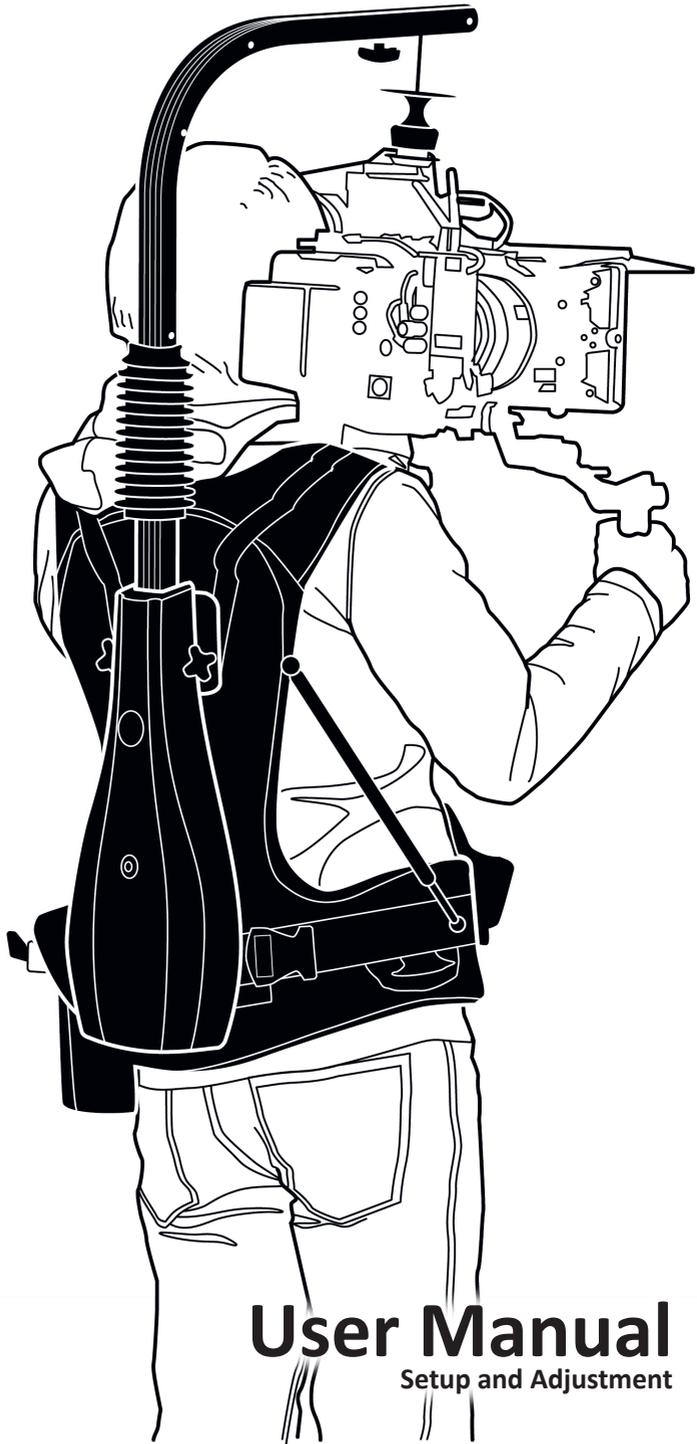

User Manual
Setup and Adjustment

User Manual

Setup and Adjustment

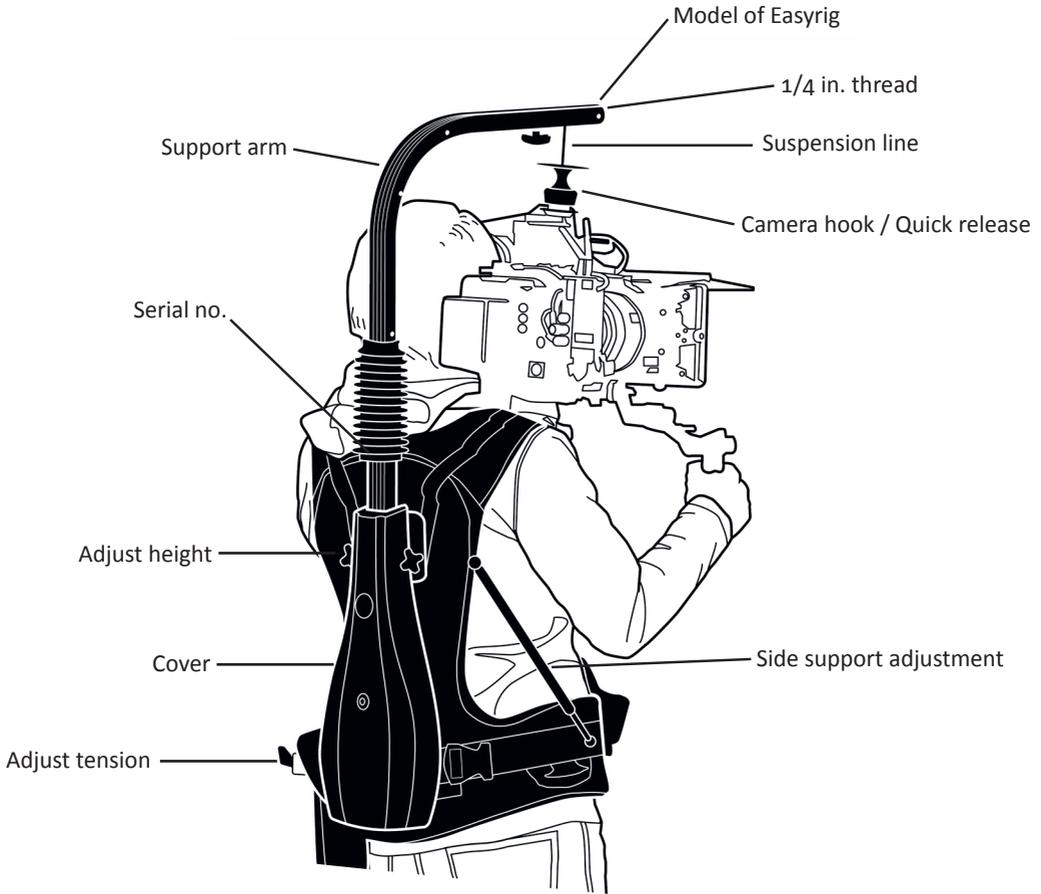

Easyrig VARIO 6 Specifications

Weight complete with Cinema/Flex vest adjustable arm +130.....	4,5 kg (10 lbs)
Weight complete with GimbalRig/Flex vest adjustable arm +130 ...	4,9 kg (11 lbs)
Suspension line (fully stretched)	90 cm (35 in)
Load range.....	4-14 kg (9-31 lbs)

Designed and made in Sweden - www.easyrig.com

Congratulations on your new Easyrig VARIO 6!

The Easyrig VARIO 6 has an adjustable weight range from 4-14 kg (9-31 lbs). By turning the adjustment knob located on the back, you can easily change the tension / power of the line.

The Easyrig VARIO 6 gives you the same advantages as our other Easyrig models with the added benefit of being able to adjust the line tension to adapt to many different cameras and configurations. The Easyrig VARIO 6 still delivers the same steady hand held shots while relieving strain on your back, neck and shoulders. The load is redistributed to the hips allowing you to shoot hand held in comfort for hours. It is more lightweight compared to the Vario 5.

The Easyrig VARIO 6 will be your best tool when it comes to hand held shooting for Movies, Commercials, Television and any other situation where stability and freedom of movement is crucial.

The Easyrig VARIO 6 is manufactured in Sweden and is built to the highest standards. The Easyrig VARIO 6 is ergonomically designed and field-tested to achieve maximum results.

To get the most out of your Easyrig VARIO 6, please read this user manual carefully. The Easyrig VARIO 6 is pat. pending.

Thank you for your investment in the Easyrig VARIO 6.

Good Luck!

Cameraman and
Inventor of Easyrig



Johan Hellsten

Using the Easyrig VARIO 6

It's easy to get into the Easyrig VARIO 6 vest, just as with a backpack. Your Easyrig VARIO 6 is loaded with adjustments for your customized comfort.

When the vest is adjusted properly you should feel the weight of the camera primarily on your hips. It is also important that the support bar is vertical. If not, the load will be unevenly distributed on the hips causing the camera to possibly contact the bar.

The waist belt adjustment should be tightened so that the vest doesn't slide down the hips but sits firmly around the hips. The shoulder straps are mainly for support and balancing the Easyrig. They prevent it from tilting.

When attaching the hook onto the camera, you might find it easier to set the camera on a table or a bench first. Try and find the balancing point of the camera, then secure the hook at that point on the handle and tighten the lock on the camera hook. Don't forget to fasten the safety line between the camera handle and the vest.

Shooting from the Hip

The Easyrig VARIO 6 gives you the freedom to shoot at various height levels, from the shoulder to the waist by simply moving the camera down from your shoulder. You should feel only a fraction of the camera's weight.

When shooting at hip level, lean slightly backwards while pushing the camera forward. This will minimize the load on your back. The length of the suspension line makes it possible to position the camera as far as your arms can reach.

Getting started with the Easyrig VARIO 6

Scan the QR-code for video instructions



Shock absorber range:

CAMERA WEIGHT AT +20 C							
KG	4	6	8	10	12	14	KG
VARIO 6 SHOCK ABSORBER 750 N							
LBS	9	13	17	22	26	30	LBS
CAMERA WEIGHT AT 68 F							




Safety precautions!



Always hold the camera when working with the Easyrig VARIO 6 and always attach the safety strap between the camera and the Easyrig VARIO 6 vest shoulder loop.

Never undo the waist belt buckle when the camera is attached to the Easyrig VARIO 6! If the waist buckle is released while the camera is attached, the weight of the camera will pull the top of the Easyrig VARIO 6 down, and could cause you to lose control of the camera.

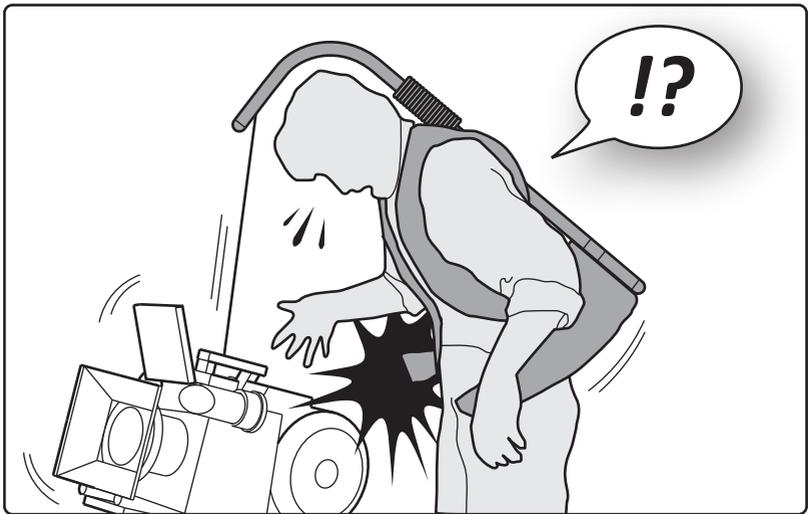

If you fall into water while wearing the Easyrig VARIO 6, it's important to get the equipment off quickly. Just release the waist, chest and shoulder strap buckles. Then slide the shoulder straps over and off of your arms.

Be especially careful when filming in rugged terrain. Make sure to wear appropriate comfortable shoes and clothing. If you work with the Easyrig VARIO 6 under special conditions, i.e. in a car, boat, plane or helicopter, always use a safety belt or harness.

Some practical advice

- Try to keep the camera as close to your body as possible, to avoid unnecessary strain on your back.
- When filming upwards, you might find it easier if you have the camera tucked under your arm.
- When filming at hip level during longer periods of time, rest the camera on the hip belt to increase stability.
- Use the Easyrig VARIO 6 for transporting your camera to and from the filming site.
- When folding your Easyrig VARIO 6 for storage, always make sure to tuck the upper part of the support arm inside the hip belt and fasten the buckle at the back of the hip belt. This will prevent the suspension line from wearing.
- If your Easyrig VARIO 6 will be inactive for more than a couple of months, make sure to store it standing up. This will keep the shock absorber gasket from drying out.
- Use mild soap if you want to get rid of dirt on the vest.
- Check the rope from wear and tear at least once every month.

“Easyrig is an effective ergonomic relief aid for back and shoulders, intended for camera operators working with hand held cameras. A considerable load relief has been ascertained. The aid provides a good basis for improvement of back health. The results show that this aid can give long-term benefits in the form of improved back health, work effectiveness and picture quality.”

***Elisabeth Schell**, Authorized ergonomist and registered physiotherapist, Swedish Television*

Easyrig VARIO 6 limited Warranty

Manufacturer's products are warranted to be free from defects caused by faulty materials or workmanship for a period of two years from the date of purchase. The liability of the Manufacturer under this warranty is limited to repairing, replacing, or at its option issuing credit for any of its products which are returned by purchaser during such period provided, however, that:

- A. Warranty card is properly filled out and returned to Manufacturer within 30 days of purchase.
- B. Defective merchandise is returned to Manufacturer accompanied by a report of findings indicating the basis of/for rejection and with transportation charges paid by the purchaser.
- C. That such defects exist and have not been caused by abuse, misuse, neglect, improper installation or assembly, repair, alteration or accident.

In no event shall Manufacturer be liable for collateral or consequential damages of any nature. This warranty is in lieu of all other warranties expressed or implied.

You can sign up for the warranty using the warranty card which can be found in the plastic pouch that comes with the rig or at www.easyrig.com/support/register-your-easyrig

If you have questions about the Vario 6, send us a mail: info@easyrig.se

QR-Code for online registration



Patent:

9513536 B2
2016259228 A1
3064822
105937696
1226122

Design Protection:

83043
79612 / 319065-001
DM/203947
DM/207260
(ZL) 201930512717.8
Vario 6: 41022011

Trademark:

6369315
015128242
5076957

Easyrig AB • Easyrigstrasse 231 • S-905 95 Umeå • Sweden