


Changing the line on Easyrig VARIO 5

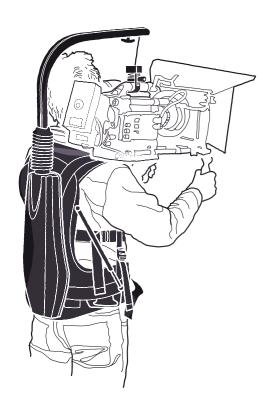

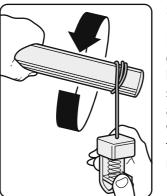


1

Put the Vario on minimum load. Extend the suspension line and hold it there by winding it around the support arm to release the power.

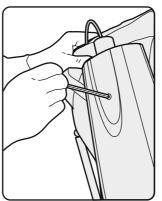


3

Remove the plastic cover by releasing the screws on the back.

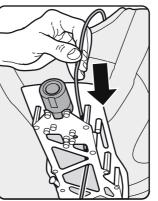

5

Start with the new line through the small plastic hole.

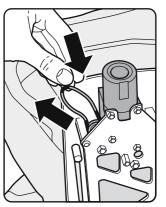


7.

The line will go around the red top wheel on the left side and then down.




2.

Detach the camera hook by untying the knot and let the line go out.

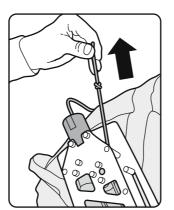


1.

Remove the old line.

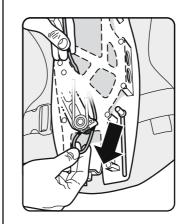

6


Let the line pass through the inner bottom red wheel and up.

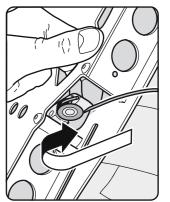

8.


The line will pass the middle blue wheel at the bottom and up.

Vario 5

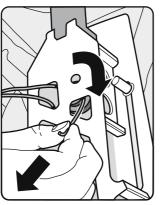

9

The line will go around the red wheel on the right side at the top and then down.

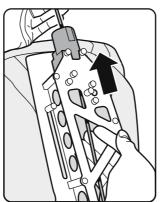


11.

Finally you will lead the line through the big black steering wheel and out where the tube is mounted.




13.

Lead the line through the big hole in the cover and remount the plastic cover.

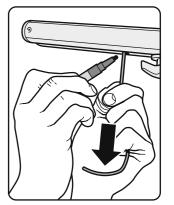


15.

When marking the line, it's important to drag it down 5cm (2inch). This is because the line has to be over stretched.




10.

The line will pass the outer bottom red wheel and then up.

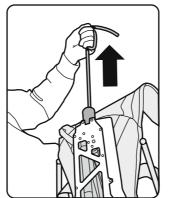


12.

Check if the Vario 5 power pack is working properly.

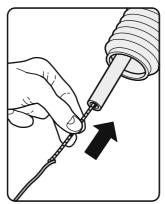

14.

Mount the line on the special tool to reinstall the line over the wheels in the upper support arm.

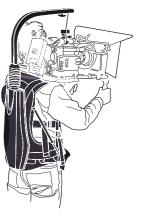

Good luck from the inventor of Easyrig

Johan Hellsten

Designed and made in Sweden www.easyrig.com

